



GORAL INDUSTRIES INC.

INSTALLATION INSTRUCTIONS
FOR THE SAFETY WASH
SYSTEM

STEP 1

POSTIONING THE TUBE

- Close the bottom sash and mark the jamb on both sides at the top of the sash.



- Raise and tilt in sash.



STEP 2

INSTALLING THE TUBE

- Pre-install the #6 pan head screw into the bottom hole of the end stopper. Turn screw until the point begins to come out the other side of the end stopper.



- Install top of tube into window jamb. No screw is necessary in the top end stopper



STEP 2

CONTINUED

- Place the tube so that the hole with the cord coming out of it is a ½” below the pencil mark made in step 1.

The tube mabe placed on either side of the shoe track.

- Repeat this step for the other side of the window



STEP3

INSTALLING THE CLEAT

- ❑ Remove the tilt latch.

On surface mounted tilt latches mount the cleat on the side rail of the sash.




- ❑ Place the cleat inside the sash frame



STEP 3

CONTINUED

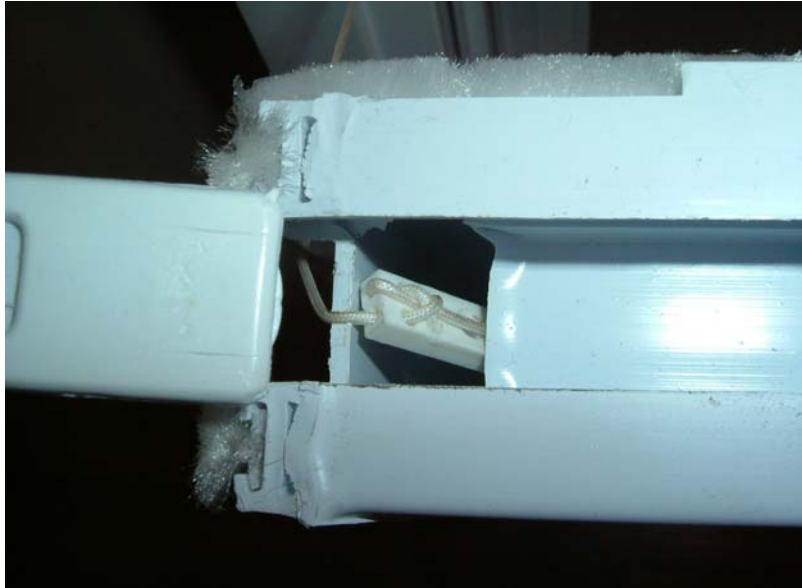

- ❑ Return tilt latch to its original position. You may need to cut a small notch for the cord so that it does not interfere with the tilt latch locking in place.
- ❑ Repeat for the other side.

FINIFHING UP

- After completing step 3 for both sides of the sash operate window and check for smooth operation.

